

WALL SPEAKER LTS.EC2880

Operation manual



Read the instructions carefully before installing the device.
Please follow the instructions of this manual in order to obtain optimum product results.

TABLE OF CONTENTS

1. Safety instructions.....	Page 3
2. Features.....	Page 3
3. Installation.....	Page 4

1. SAFETY PRECAUTIONS

When used as indicated, this device is designed and manufactured to ensure your personal safety. Nevertheless, improper use may cause a risk of electric shock or fire. Please carefully read all safety instructions and the user manual before any installation and use; keep them for reference.

Pay attention to all warnings in these instructions and on the device.

- Water and moisture : Do not expose the unit to rain or moisture (near a bathtub, sink, kitchen sink or laundry room, in a wet basement or near a swimming pool)
- Ventilation : The unit must be positioned so that its location or position does not interfere with proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block the vents; secondly, do not place it in a recessed area, such as a bookcase or cabinet that may prevent air from flowing through the vents.
- Heat : Place the unit away from heat sources such as radiators, heat registers, stoves, or other device (including amplifiers) that produce heat.
- Power sources : Before connecting, make sure the voltage is correct and that it is not higher than that listed on the back cover of the unit, the operating manual or marked on the unit.
- Make sure you place the device on a stable surface.
- Penetration by objects and liquids : Make sure nothing falls or no liquid flows into the openings or vents of the product.
- Accessories : Do not use not recommended accessories by the product manufacturer.
- Protection against lightning and overload : Unplug the unit from the wall outlet and disconnect the antenna or cable during a lightning storm or when left unattended and unused for long periods. This will prevent damage to the unit due to lightning or a temporary surge.


The unit must be repaired by qualified technicians.

2. FEATURES


Power supply 100V	5W / 10W / 20W / 40W / 80W
Power supply 70V	2,5W / 5W / 10W / 20W / 40W
Impedance	Black : COM / White : 2 K Ω 1 K Ω / 500 Ω / 250 Ω / 125 Ω
Sensitivity	94 dB
Frequency response	100 - 17 KHz
Dimension	280 x 225 x 375 mm
Weight	6,2 kg

3. INSTALLATION


Step 1 : Attach the bracket to the wall with the provided screws.

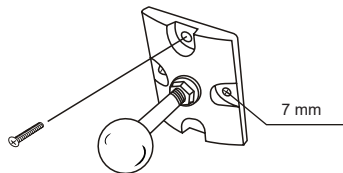


Step 2 : Remove logo.

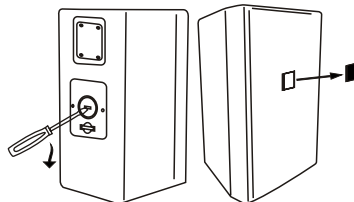


Step 3 : Unscrew the adjustable mounting system.

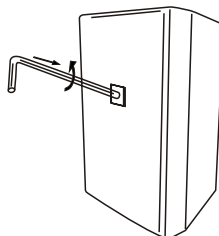

Step 4 : Place the speaker on the bracket.

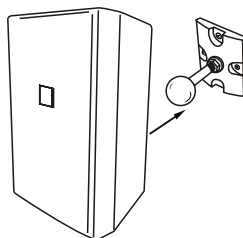

Step 5 : Using the key provided, screw the mounting rotating system.

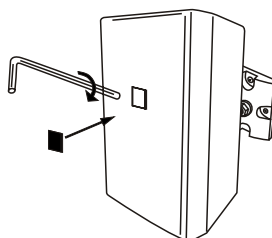

LINEARSOUND



Linear Technologie • 11 rue du Puits Rochefort • 42 100 Saint-Etienne
Tél: +33 (0)4 77 81 49 49 • Fax: +33 (0)4 77 81 49 40 • www.lineartech.fr